 


E-200 Phono Stage Amplifier



LUXMAN

The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING - TO REDUCE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

To prevent the risk of electric shock, do not remove cover or back plate. No user serviceable parts inside.

IMPORTANT SAFETY INSTRUCTIONS!

PLEASE READ THEM BEFORE OPERATING THIS EQUIPMENT.

- 1. Read these instructions.
- 2. Heed all warnings.
- 3. Follow all instructions.
- 4. Do not use this apparatus near water.
- 5. Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 8. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

- 9. Only use attachments/accessories specified by the manufacturer.
- 10. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 12. Do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases or beverages, are placed on the equipment.
- 13. To completely disconnect this equipment from the AC. mains, disconnect the power supply cord plug from the AC socket.
- 14. The power supply cord should be kept in good condition, if it gets chewed up by a pet, it should be replaced.



Thank You

Your decision to purchase this Luxman E-200 Phono Stage Amplifier singles you out as one of the most discriminating music listeners. Luxman have been hand-crafting exquisite audio reproducing equipment in Japan since 1925.


In terms of performance, we build our products to deliver natural sound that brings spiritual serenity to the listener. And in aesthetic terms, we stress the interplay of light and shadow, so the Luxman products present a solid, sculpture-like impression.

Please take a short time to read the information in this manual. We want you to be as familiar as possible with all the features and functions of your new Luxman.


Contents

Important Safety Instructions	Page 3
Contents	4
Quick Set Up Chart	5
Front Panel Controls	6
Rear Panel Inputs & Outputs	7
Installation	8
Connection to Other Components	9
Block Diagram	10
Specifications	11
Warranty	12 - 13
Luxman Worldwide Contacts	16.

PHONO AMPLIFIER E-200

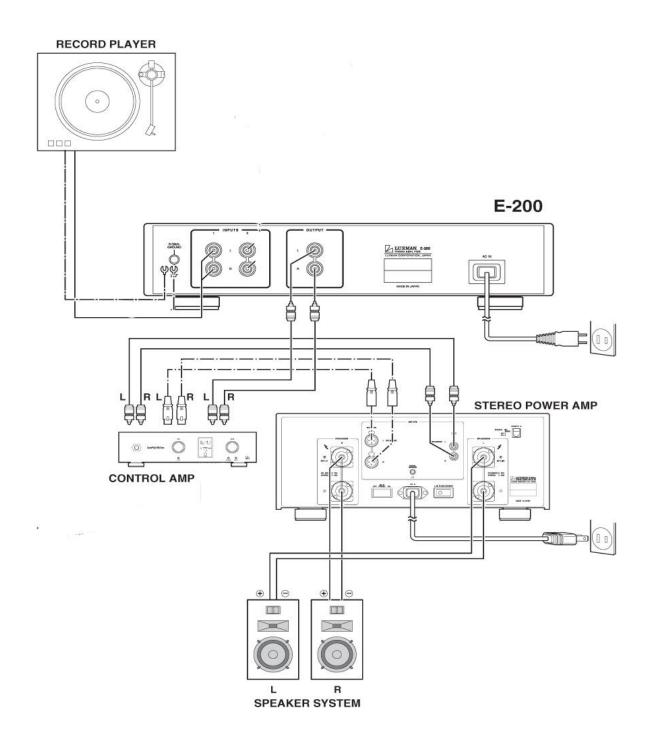

Please refer to Page 9 – **Connections** for more in depth instructions.

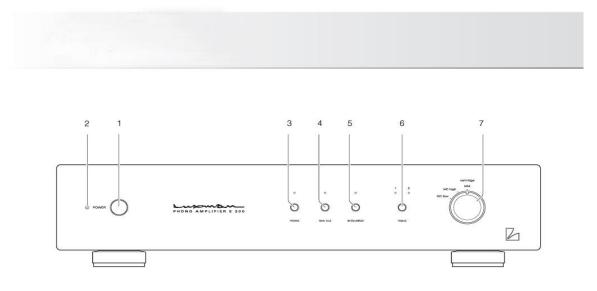


- 1. **POWER STAND-BY / ON**, push button turns the E-1 either ON {blue} or STAND-By)orange) .
- 2. **POWER INDICATOR; LED** glows orange initially to show that it is warming up, will shine blue once the E-1 is fully operational.
- 3. **MONO**; depress the Mono switch to combine the Left and Right Stereo signals. Usually engaged while listening to a Mono LP. Can also be used during speaker set-up.
- 4. LOW CUT; is a subsonic filter. While playing records, you may notice your woofers being pushed back & forth, even though you are listening at a moderate level. This is due to the subsonic energy that the cartridge is retrieving but is below our listening capability, though the amplifier & loudspeakers will try to reproduce this. Not to mention that there are not acoustic instruments that can play so low. The lowest note on a pipe organ is 16 Hz.

The Low Cut Filter will cut off the low frequency energy that you are not able to hear and spare your amplifier of the heavy, unnecessary load.

- **ARTICULATE**; *Over time, the various* parts of the inner assembly of moving coil cartridges build-up experience а of magnetic energy, resulting in a veiling of detail, even a loss of dynamics and *upper-octave* resolution. Demagnitizing the cartridge removes the excess, often bring back a cartridges sense of "presence" and "life".
- 5. Depress the Articulate switch when you want to demagnetize your Moving Coil cartridge; only takes thirty seconds. For best results please demagnetize your cartridge every forty hours.
- 6. INPUT SELECTOR; allows you to choose between the two inputs; Moving Magnet (MM) or Moving Coil cartridges (MC). Can be either one MC and one MM or two MC or even two MM.
- 7. MM / MC SELECTOR; select either of three Gain / Impedance settings. MC Low = 2.5Ω +63dB MC High = 40Ω +56 dB MM = $47k\Omega$ +36 dB

PHONO AMPLIFIER E-200

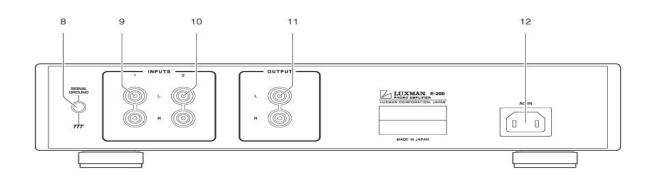

- 8. GROUND; connect the earth (ground) lead from the tonearm to this grounding post. In many systems when the ground is not connected between the tonearm and the phono-stage a noticeable hum will be evident from the loudspeakers.
- **9. INPUT 1;** connect the output from a MC or MM cartridge to this input.
- **10. INPUT 2;** connect the output from a MC or MM cartridge to this input.

- **11. OUTPUT:** connect the output from the E-200 to an input on your control amplifier / linestage.
- 12. AC IN (AC INLET) Connect the E-1 supplied power cord to a live AC outlet. Refer to information on the back panel to determine the correct voltage. N. American models are supplied with a special 115 volt transformer.

Now you are ready to take advantage of LUXMAN's long standing tradition of excellence in the E-200 Phono Stage Amplifier. Up to two cartridge / tonearm combinations can be connected to the E-200, its output will drive any high quality control / power amplifier system to its ultimate performance. The E-200's reproduction is sonically transparent and absolutely accurate.

INSTALLATION


The E-200 can be placed upright on a table or shelf, standing on its four feet. It also can be custom installed in piece of furniture or cabinet of your choice.

Always provide adequate ventilation for your E-200. Cool operation ensures the longest possible operating life for any electronic instrument. Do not install the E-200 directly above a heat generating component such as a


high powered amplifier. If all the components are installed in a single cabinet, a quiet running ventilation fan should be utilized to maintain all the system components at the coolest temperature.

Allow at least 4" (10 cm) above the amplifier, 2" (5 cm) all around.

PHONO AMPLIFIER E-200

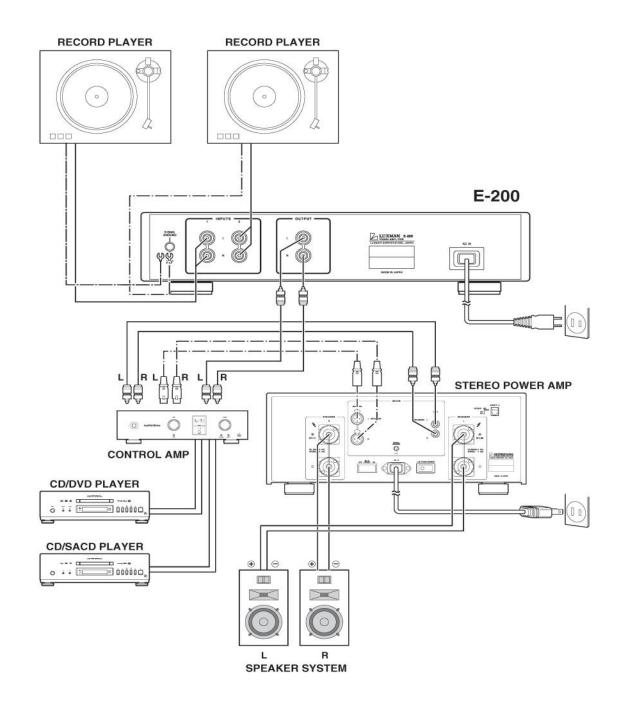

9

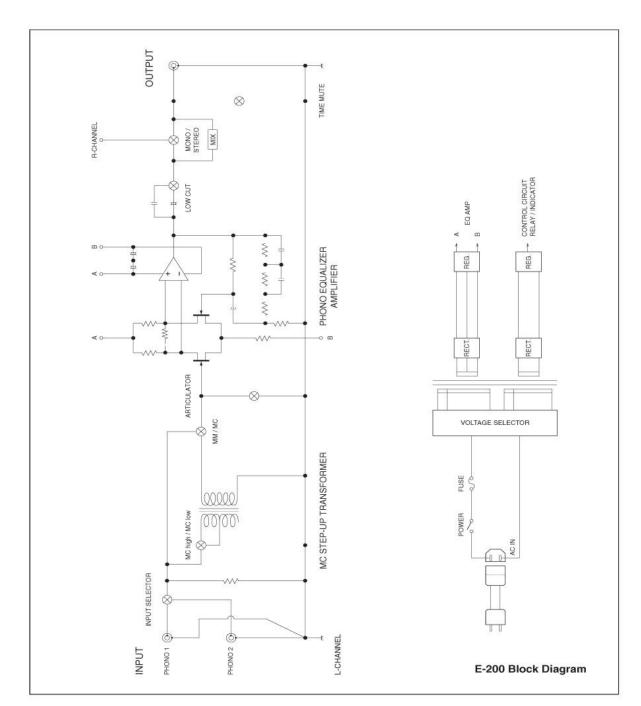



SPECIFICATIONS

Input Sensitivity Input Impedance Gain Output/ Output Impedance	MM: 4mV, MC high: 0.4mV, MC low: 0.18mV MM: 47KΩ, MC high: 40Ω, MC low: 2.5Ω MM: 36dB, MC high: 56dB, MC low: 63dB 250mV/300Ω
Circuit system	Built-in MC step up transformer, NF type equalizer
System Controls	Front Panel: Power switch, Cartridge switch(MM/MC high/MC low), Input switchable button(2way), mono switch, subsonic switch(30Hz/-3dB), Cartridge demagnitizer switch Rear Panel: Input 2, Output 1, Signal ground terminal, AC inlet
Voltage /	AC 115V(50/60Hz)/4W
Power Consumption	
Dimensions (mm)	14.3" (364) (W)×3.3" (84)(H)×10.1" (257)(D)
Weight (KG)	10.0 lbs. (4.4)

N.American Warranty

TERMS AND CONDITIONS

1. LIMITED WARRANTY

Luxman warrants the product designated herein to be free of manufacturing defects in material and workmanship, subject to the conditions hereinafter set forth, for a period of three (3) years from the date of purchase by the original purchaser or no later than five (5) years from the date of shipment to the authorized Luxman dealer, whichever comes first, excepting vacuum tubes which are warranted for 90 days only (See 6).

2. CONDITIONS

This Warranty is subject to the following conditions and limitations. The Warranty is void and inapplicable if the product has been used or handled other than in accordance with the instructions in the owner's manual, abused, or misused, damaged by accident or neglect or in being transported, or the defect is due to the product being repaired or tampered with by anyone other than Luxman or an authorized Luxman repair center. The product must be packed and returned to Luxman or an authorized Luxman repair center by the customer at his or her sole expense. Luxman will pay return freight of its choice. A RETURNED PRODUCT MUST BE ACCOMPANIED BY A WRITTEN DESCRIPTION OF THE DEFECT AND A PHOTOCOPY OF THE ORIGINAL PURCHASE RECEIPT. This receipt must clearly list model and serial number, the date of purchase, the name and address of the purchaser and authorized dealer and the price paid by the purchaser. Luxman reserves the right to modify the design of any product without obligation to purchasers of previously manufactured products and to change the prices or specifications of any product without notice or obligation to any person.

3. REMEDY

In the event the above product fails to meet the above Warranty and the above conditions have been met, the purchaser's sole remedy under this Limited Warranty shall be to return the product to Luxman or an authorized Luxman repair center where the defect will be rectified without charge for parts or labor, except vacuum tubes (See 6).

4. LIMITED TO ORIGINAL PURCHASER

This Warranty is for the sole benefit of the original purchaser of the covered product and shall not be transferred to a subsequent purchaser of the product.

5. DURATION OF WARRANTY

This Warranty expires on the third anniversary of the date of purchase or no later than the fifth anniversary of the date of shipment to the authorized Luxman dealer, whichever comes first.

6. VACUUM TUBES

Vacuum tubes are warranted for the original 90-day period only.

7. DEMONSTRATION EQUIPMENT

Equipment used by an authorized dealer for demonstration purposes is warranted to be free of manufacturing defects in materials and workmanship for a period of three (3) years from the date of shipment to the dealer. Vacuum tubes are warranted for 90 days.

After the first year, demo equipment needing warranty service must be packed and returned to Luxman Service Center by the dealer at his sole expense. Luxman will pay return freight of its choice. A returned product must be accompanied by a written description of the defect on an LUXMAN RETURNED GOODS AUTHORIZATION form. Dealer-owned demonstration equipment sold at retail within three (3) years of date of shipment to the dealer is warranted to the first retail customer to be free of manufacturing defects in materials and workmanship for the duration of the 3-Year Limited Warranty remaining (as measured from the date of shipment of the equipment to the dealer). Vacuum tubes are not warranted for any period under these conditions of sale. In the event warranty service is needed under these conditions, the owner of the equipment must provide a copy of his purchase receipt, fulfilling the requirements described under "2. Conditions" above. The product must be packed and returned to Luxman or an authorized Luxman repair center by the customer at his or her sole expense. Luxman will pay return freight of its choice.

8. MISCELLANEOUS

ANY IMPLIED WARRANTIES RELATING TO THE ABOVE PRODUCT SHALL BE LIMITED TO THE DURATION OF THIS WARRANTY. THE WARRANTY DOES NOT EXTEND TO ANY INCIDENTAL OR CONSEQUENTIAL COSTS OR DAMAGES TO THE PURCHASER. Some states do not allow limitations on how long an implied warranty lasts or exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

9. US & Canada WARRANTOR

Inquiries regarding the above Limited Warranty may be sent to the following address: On A Higher Note, PO Box 698, San Juan Capistrano, CA 92693.



www.luxman.co.jp

www.luxman-audio.de

www.luxman.pl

www.luxman.us

Luxman, Japan phone (45) 470 6991 fax (45) 470 6997 info@LUXMAN.co.jp

Luxman World Wide phone +44 1480 447700 fax +44 1480 431767

Germany phone +49 (0)5921.78849.27 fax +49 (0)5921.78849.28 info@tcg-gmbh.de

Poland phone 012 265 02 85 poczta@luxman.pl

Sweden phone + 46 477 31270 fax + 46 477 31838 <u>k-nilsson@telia.com</u>

www.luxman-audio.co.uk

United Kingdom phone +44(0)1900 813064 fax +44(0)1900 818060 select.audio@tiscali.co.uk

N.America phone (+ for

N.America phone (+1) 949 544-1990 fax (+1) 949 612-0201 info@onahighernote.com



P.O. Box 698, San Juan Capistrano, CA 92675 | Office: 949-544-1990 | Fax: 949-612-0201 | info@onahighernote.com



North American Limited Product Warranty

(effective 9/1//2014)

TERMS AND CONDITIONS

1. LIMITED WARRANTY

Luxman warrants the product designated herein to be free of manufacturing defects in material and workmanship, subject to the conditions hereinafter set forth, for a period of three (3) years from the date of purchase by the original purchaser or no later than four (4) years from the date of shipment to the authorized Luxman dealer, whichever comes first, excepting vacuum tubes which are warranted for 90 days only (See 6).

2. CONDITIONS

This Warranty is subject to the following conditions and limitations. The Warranty is void and inapplicable if the product has been used or handled other than in accordance with the instructions in the owner's manual, abused, or misused, damaged by accident or neglect or in being transported, or the defect is due to the product being repaired or tampered with by anyone other than Luxman or an authorized Luxman repair center. The product must be packed and returned to Luxman or an authorized Luxman repair center by the customer at his or her sole expense. Luxman will pay return freight of its choice. A RETURNED PRODUCT MUST BE ACCOMPANIED BY A WRITTEN DESCRIPTION OF THE DEFECT AND A PHOTOCOPY OF THE ORIGINAL PURCHASE RECEIPT. This receipt must clearly list model and serial number, the date of purchase, the name and address of the purchaser and authorized dealer and the price paid by the purchaser. Luxman reserves the right to modify the design of any product without obligation to purchasers of previously manufactured products and to change the prices or specifications of any product without notice or obligation to any person.

3. REMEDY

In the event the above product fails to meet the above Warranty and the above conditions have been met, the purchaser's sole remedy under this Limited Warranty shall be to return the product to Luxman or an authorized Luxman repair center where the defect will be rectified without charge for parts or labor, except vacuum tubes (See 6).

4. LIMITED TO ORIGINAL PURCHASER

This Warranty is for the sole benefit of the original purchaser of the covered product and shall not be transferred to a subsequent purchaser of the product. The only instance this Warranty is transferrable from the original purchaser to a subsequent purchaser is if this subsequent purchase is from an authorized Luxman dealer. In such event, the subsequent purchaser will be the sole beneficiary of this Warranty through its expiration date.

5. DURATION OF WARRANTY

This Warranty expires on the third anniversary of the date of purchase or no later than the fourth anniversary of the date of shipment to the authorized Luxman dealer, whichever comes first.



P.O. Box 698, San Juan Capistrano, CA 92675 | Office: 949-544-1990 | Fax: 949-612-0201 | info@onahighernote.com

6. VACUUM TUBES

Vacuum tubes are warranted for the original 90-day period only.

7. DEMONSTRATION EQUIPMENT EXCEPTION

Equipment used by an authorized dealer for demonstration purposes is warranted to be free of manufacturing defects in materials and workmanship for a period of three (3) years from the date of shipment to the dealer. Vacuum tubes are warranted for 90 days.

Demo equipment needing warranty service must be packed and returned to Luxman Service Center by the dealer at his sole expense. Luxman will pay return freight of its choice. A returned product must be accompanied by a written description of the defect on an LUXMAN RETURNED GOODS AUTHORIZATION form.

Dealer-owned demonstration equipment sold at retail within three (3) years of date of shipment to the dealer is warranted to the first retail customer to be free of manufacturing defects in materials and workmanship for a period of (a) four (4) years of date of shipment to the dealer or (b) three (3) years from date of purchase, whichever is earlier.

Vacuum tubes are not warranted for any period under these conditions of sale.

In the event warranty service is needed under these conditions, the owner of the equipment must provide a copy of his purchase receipt, fulfilling the requirements described under "2. Conditions" above. The product must be packed and returned to Luxman or an authorized Luxman repair center by the customer at his or her sole expense. Luxman will pay return freight of its choice.

8. MISCELLANEOUS

ANY IMPLIED WARRANTIES RELATING TO THE ABOVE PRODUCT SHALL BE LIMITED TO THE DURATION OF THIS WARRANTY. THE WARRANTY DOES NOT EXTEND TO ANY INCIDENTAL OR CONSEQUENTIAL COSTS OR DAMAGES TO THE PURCHASER. Some states do not allow limitations on how long an implied warranty lasts or exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

9. US & Canada WARRANTOR

Inquiries regarding the above Limited Warranty may be sent to the following address: On A Higher Note, PO Box 698, San Juan Capistrano, CA 92693.



P.O. Box 698, San Juan Capistrano, CA 92675 | Office: 949-544-1990 | Fax: 949-612-0201 | info@onahighernote.com

Luxman North American Limited Product Warranty Card

Please mail, fax, or email the completed form, along with a copy of the Dealer's Invoice to the contact info above. Do not hesitate to contact us with further questions.

Name:			Name of Dealer Purchased From:	
Street Address:			City:	
State:			Zip:	
Phone #:		Email Address:		
Date of Purchase:		Serial #:		

We would like to know you a little bit better but information below is completely optional:

MUSIC PREFERENCES

HOW LOU	ID DO YOU LISTEN T		JSIC		
	LOUD		MEDIUM		QUIET
SIZE AND	SHAPE OF YOUR LIS	TENING RO	ОМ		
CURRENT SET UP OF YOUR AUDIO COMPONENTS IN LISTENING AREAS					
We do not share or sell your info. You are automatically subscribed to our monthly Newsletter and our online blog with music, gear and industry news. To opt out, check this box here:					
	US ON FACEBO	OK f /ona	HIGHERNOTE		0
FOLL	OW US ON TWI	TTER 💴/a	ONAHIGHERNOTI	E	200
		BLOG MAN			3/1